

Reverse Power Relay RR20



- Motoring protection
- Adjustable time delay
- Easy to install
- Power signal output for indicator

Reverse Power Relay RR20 monitors the power flow at the terminals of an ac-generator. The relay operates when the real power flow in a given direction exceeds predetermined limits. This Protects the machine against motoring due to loss of prime mover torque. A time delay is incorporated to avoid tripping due to ransients such as those encountered due to load rejection or during synchronization. RR20 also have power output signal for power indicator meter.



Wisnu and Supak Co., Ltd 102/111-112 Tessabansongkroh Rd., Ladyao, Jatujak, Bangkok 10900 Tel (662)591-1916, (662)954-3280-1, Fax (662)580-4427, <u>www.wisco.co.th</u>, E-mail <u>info@wisco.co.th</u>



Specifications

Input Input Voltage: 3 Phase (380 VAC) or 1 Phase (220 VAC) Input Current: 0 - 5 Aac (1 VA Max.) Reverse Power: Adjustable 0 to 20 % of Input Current On Delay: Adjustable 0 to 20 sec. Start Delay Time: Adjustable 0 to 15 sec. Analog Output Number of Channel: 1 Channel Output Type: Voltage Output Range: 0 to 10 VDC Relay Output Number of Channel: 1 Channel Relay Type: N.O., N.C. (SPDT)

Environmental Limits

Operating Temperature: 0 to 55 °C Operating Humidity: 5 to 95% RH Storage Temperature: 0 to 70 °C Physical Characteristics Dimension: W50 x H70 x D130 mm. Mounting: Wall or DIN rail Connection: Plug-in 11 pins socket Wiring: Screw terminals on base socket Warranty Warranty Period: 5 year

Ordering Information: Specify Input Voltage Example RR20/3 Phase (380 VAC) Package Checklist 1. RR20

Setting and Testing

Contact Rating: 3 A @ 250 VAC

- 1. Wiring as show on Diagram. Beware: signal from CT should really come from CT of Phase L1 and Polarity of CT should wiring as show in diagram
- 2. Load D.C. Voltage at Volt (1) should be +, 0 V (2) if Volt is negative it mean

Polarity of CT is switch between I and k

- 3. In order to test Reverse Power Relay. Switch line of CT then Volt should be negative and Relay should be "ON" status and LED of "TRIP" is light up.
- 4. "ON DELAY" button is for setting delay time of Relay ON when Reverse Power is more than set up value
- "START DELAY" button is for setting up delay time of Relay ON only wen start powering L1, L2 and L3

บริษัท วิศณุและสุภัค จำกัด 102/111-112 หมู่บ้านสินพัฒนาธานี ถนนเทศบาลสงเคราะห์ แขวงลาดยาว เขตจตุจักร กรุงเทพฯ 10900 โทร. (02)591-1916, (02)954-3280-1, แฟกซ์ (02)580-4427, <u>www.wisco.co.th</u>, อีเมล์ <u>info@wisco.co.th</u>