

## Speed Sensing Relay SS95



- Magnetic pick-up input
- 3 Speed set point
- Output relay contact


**Speed Sensing Relay SS95** provides 3 user adjustable trip levels with LED relay state indication and a speed indicator output signal. Trip functions provided are

**CRANK** disengages the crank starter

**UNDER SPEED** energises protection or underspeed alarm

**OVER SPEED** alarms or trips on overspeed

A magnetic pick-up, situated close to the engine flywheel, produces a high frequency pulse train directly proportional to the number of teeth passing it. The frequency of these pulse is converted to an analogue signal which is used to provide both engine speed indication and the signal to the trip circuitry.

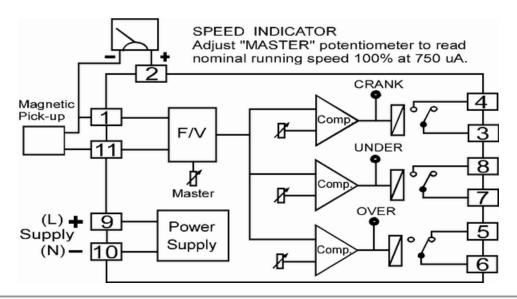



## **Specifications**

**Input** 

Number of channel: 1 Channel Input type: Pulse, Frequency

Input range:

Pulse (0.5 V to 75 V peak to peak) Frequency (1 KHz to 10 KHz (RPM. x number of teeth)/ 60)

**Set Point** 

Crank: 10% to 50%

**Under speed:** 50% to 100% **Over speed:** 100% to 130%

**Relay Output** 

Number of channel: 3 Channel

Relay type: N.O. (SPDT)

Contact Rating: 3 A @ 250 VAC
Calibration value: 0.75 mA = 100 %,

1 mA = 133 % of nominal speed **Crank:** Relay energises at setpoint

**Under speed:** Relay energises at setpoint **Over speed:** Relay de-energises at setpoint

Reset: Automatic

**Power Requirements** 

Power Supply: 12 VDC or 24 VDC

(± 20 %)

**Environmental Limits** 

**Operating Temperature:** 0 to 55 °C **Operating Humidity:** 5 to 95% RH **Storage Temperature:** 0 to 70 °C

**Physical Characteristics** 

**Dimension:** W50  $\times$  H70  $\times$  D130 mm.

**Mounting:** Wall or DIN rail

**Connection:** Plug-in 11 pins socket **Wiring:** Screw terminals on base socket

Warranty

Warranty Period: 5 year

Ordering Information: Specify 100 % input frequency, Power supply, Set point Example SS95/3 KHz/12V/Crank 20 %/Underspeed 80 %/Overspeed 120 %

**Package Checklist** 

1. SS95